



## Operating instructions

### Important advice

- Please store the override keys and your Personal Code in a secure place outside the Safe.
- Do not use personal dates like birthdays, phone numbers, etc.
- Always test the new code several times with Safe door open.
- For your own security, please use a 6-digit code (1 million different possibilities).
- If the batteries inside the Safe are exhausted, you can only open the Safe with the key.

### Opening your Safe with the override key

- Carefully slide the cover plate away from the keypad on the front door.
- Enter the override key in the keyhole and turn anti-clockwise until the stop.
- Turn the knob at the left hand of the keypad clockwise until the stop and open the door.

Advice: **Use the emergency lock only in emergency cases.**

### How to insert batteries and program your Personal Code

- Remove battery cover on the inside of the door and insert 4 batteries type LR 6 (Alkaline).
- You can now program your Personal Code.
- Press the red button on the inside of the door. A control diode will light up on the outside of the door.
- Enter your Personal Code (3 – 6 digits).
- Confirm your Code by pressing the enter/on button on the right at the bottom of the keypad.

### Opening your Safe with the Code

- Enter your Personal Code (3 – 6 digits).
- Confirm your Code by pressing the enter/on button on the right at the bottom of the keypad.
- A tone signals that the correct Personal Code has been entered. Turn the knob clockwise until the stop and open the door within approx. 6 seconds of the tone.

### Closing the Safe

- Shut the door and turn the knob anti-clockwise until the stop.

### New batteries

- If the red control diode lights up, all 4 batteries must be replaced (**type LR 6**).
- You need to program your Personal Code again!

### Blocking period for wrong Code

- If an incorrect code is entered 3 times, the Safe will 'Time Out' for a short time – a maximum time of 2 minutes.
- Once the 'Time Out' has passed, the correct code can be entered again to open the door.

### Installation

- The Safe should be fixed at the wall or floor to protect it against theft.

### Technical details

- Power supply: 4 batteries type LR 6 /AA/1,5 V (Alkaline).
- Working humidity: 20% ~ 90% rH – non-condensed / non-condensing.