



## Assembly instructions for FP 4 E

BURG-WÄCHTER KG  
Altenhofer Weg 15  
58300 Wetter  
Germany

[www.burg-waechter.de](http://www.burg-waechter.de)

### Important note

The safe will have its burglary or fire protection function only after attachment to a solid building part. Use the provided anchoring points in order to achieve the necessary stationary connection.

### Assembly


Put the safe in the desired position.

- Mark the drilling point after having removed the plastic cover (6) and modelling material above the anchoring hole.

**Please pay attention to the existing maximum floor thickness and any heating pipes, power lines, etc. placed in the floor!**

- Remove the safe again and drill the hole, using a 10 mm stone drill, corresponding to the screw length with.
- Clean the drilled hole with a vacuum cleaner; then push the metal screw anchor (2) into the hole.
- Bring the safe into its final position. You may use the centring pin (3) for this (Optional accessories).
- Use the screw (1) and the washers (4,5) to attach the safe to the floor.
- Close the drilling hole with the modelling material and plastic cover (6).

### Assembly material

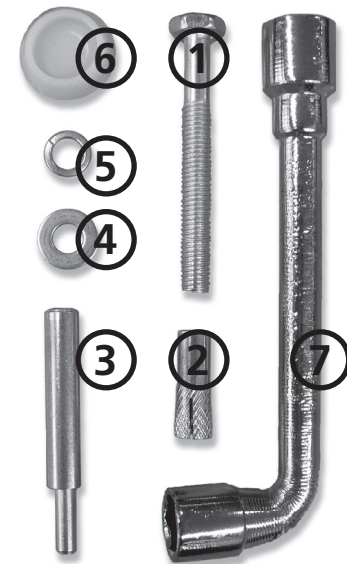

- ① Screw
- ② Metal screw anchor
- ③ Centring pin (optional accessories)
- ④ Washer
- ⑤ Spring lock washer
- ⑥ Plastic cover
- ⑦ Mounting key